





# INSTALLATION INSTRUCTIONS

## Full Cut-off LED Wall Pack (WPD)

### CAUTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. DANGER- Risk of shock- Disconnect power before installation.
2. This luminaire must be installed in accordance with the NEC or your local electrical code.
3. Suitable for wet location and operation in ambient not exceeding 40°C
4. Min 75°C supply conductors.
5. Products are not intended for use in environments containing airborne corrosive airborne corrosive agents such as chemical solvents, cleaners, or cutting fluids.
6. This luminaire is rated for 120-277Vac 60Hz only.
7. Replace the glass if damaged

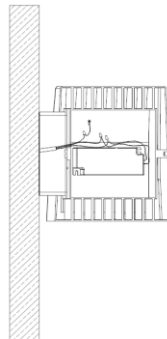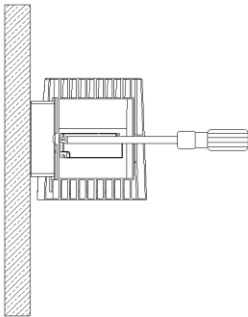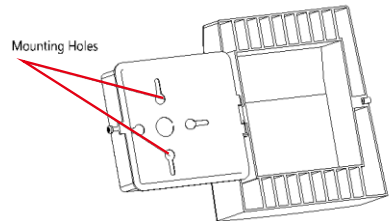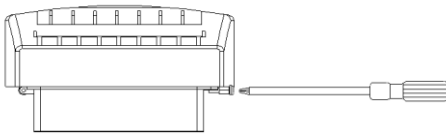

1. Loosen the screw of fixture and open the mounting box.
2. Knock out appropriate holes around outlet hole in mounting box, and apply the gasket to the backsurface of housing and fasten the rear housing to the outlet box using the screws supplied with the outlet box.
3. Complete the wiring to the power source and ground (refer to wiring instructions).
  - a. Connect the black fixture lead to the voltage supply lead
  - b. Connect the white fixture lead to the neutral supply lead
  - c. Connect the ground lead to the supply ground lead.
4. Replace front housing by reversing procedure used to remove it.